



Vacuum Packaging Machine

Jumbo

User Manual

Art No. 0894622

Original Instructions for Use

© Henkelman 2017-2018



- The machine is not suitable for the packaging of toxic, corrosive, irritant or potentially explosive materials.
- All persons responsible for the operation of this machine must at least fully read and understand the chapters about the operation and safety provided in these operating instructions.
- All persons responsible for the assembly, installation, maintenance and/or repairs must fully read and understand these operating instructions.
- The user is at all times responsible for the interpretation and use of this manual. Contact the owner or the manager in case of questions or doubts about the correct interpretation.
- This manual should be kept near the machine and should be within reach for its users.
- All major maintenance work, modifications to the machine and observations must be kept in a logbook; see *Logbook* on page 42.
- Modifications to the installation/machine are not allowed without the prior written consent of the supplier.
- For specific maintenance work not included in this manual, please contact the supplier.
- Comply with the safety requirements as set out in *Safety* on page 9 at all times.
- The correct operation and safety of the system can only be guaranteed if the recommended maintenance is performed on time and properly.
- Illustrations shown may differ from your machine.

Copyright © Henkelman BV 2017-2018

Henkelman BV reserves the right to change specifications and/or spare parts without prior notice.

The content of this user manual may also be changed without prior notice.

For information about settings, maintenance and repairs not provided for in this user manual, please contact the technical department of your supplier.

Henkelman BV accepts no liability for damage and/or problems arising from the use of spare parts not supplied by Henkelman BV.

This user manual has been compiled with all possible care. Henkelman BV assumes no responsibility for any errors in this manual and/or the consequences of an erroneous interpretation of the instructions.

All rights reserved. No part of this publication may be reproduced, stored in computerised databases, or made public, in any form or by any means, either electronic, mechanical, through photocopying, recording or otherwise, without the prior written consent of Henkelman BV. This also applies to the associated drawings and diagrams.

Contents

List of Figures.....	5
1 Preamble.....	6
1.1 List of the Symbols Used in this Manual.....	6
1.2 Qualified personnel.....	6
1.3 Storing the manual.....	7
1.4 Regulatory information.....	7
1.5 Terms of Warranty.....	7
1.6 Liability.....	7
1.7 Terms and abbreviations.....	8
2 Safety.....	9
2.1 Pictograms on the Machine.....	9
2.2 General Warnings.....	9
2.3 Warnings During Use.....	10
2.4 Warnings for Operating Personnel.....	11
3 Introduction.....	12
4 Description of the Machine.....	13
4.1 Jumbo series.....	13
4.1.1 Overview of the Main Components.....	14
4.2 Description of the Packaging Process/Machine Functions.....	15
4.2.1 Packaging Process/Machine Functions.....	15
4.2.2 General Functions.....	15
4.3 Sealing System.....	16
5 Installation.....	17
5.1 Transportation and Installation.....	17
5.2 Connecting the Machine.....	17
5.3 Prior to the First Use.....	18
6 Operation.....	19
6.1 1-Programme Control System (1-PCS).....	19
6.1.1 Operating Elements.....	19
6.1.2 Starting the Machine.....	20
6.1.3 Starting the Packaging Cycle.....	20
6.1.4 Proceeding to the Next Step in the Cycle.....	20
6.1.5 Terminating a Programme.....	20
6.1.6 Changing the Programme Settings.....	21
6.1.6.1 Vacuum.....	21
6.1.6.2 Vacuum+ time (only for sensor control).....	21
6.1.6.3 Seal.....	22
6.1.6.4 External Vacuum (optional).....	22

6.1.7 Guideline for Function Values.....	23
7 Maintenance.....	24
7.1 Running the Pump Cleaning Programme.....	24
7.2 Maintenance Schedule.....	24
7.3 Cleaning the Machine.....	25
7.4 Replacing the Sealing Wire.....	25
7.5 Replacing the Silicone Rubber of the Silicone Holders.....	27
7.6 Replacing the Lid Gasket.....	27
7.7 Inspecting the Lid Springs.....	28
7.8 Vacuum Pump maintenance.....	28
7.8.1 Overview.....	28
7.8.1.1 Pump 4 m ³ /h.....	29
7.8.1.2 Pump 8 m ³ /h.....	29
7.8.1.3 Pump 16 - 21 m ³ /h.....	30
7.8.2 Removing Oil, Refilling Oil.....	30
7.8.3 Replacing the Oil Exhaust Filter.....	31
7.8.3.1 Pump 4 m ³ /h.....	31
7.8.3.2 Pump 8 m ³ /h.....	32
7.8.3.3 Pump 16 - 21 m ³ /h.....	32
7.8.4 Running the Pump Cleaning Programme.....	33
8 Troubleshooting and Error Codes.....	34
9 Terms of Warranty.....	36
10 Disposal.....	37
11 Appendices.....	38
11.1 Technical Data.....	38
11.1.1 Jumbo series.....	38
11.2 Electrical Installation.....	40
11.3 Vapour Pressure Curve of Water.....	41
11.4 Logbook.....	42

List of Figures

Figure 1: Overview of the Main Components.....	14
Figure 2: Overview of the Sealing System.....	16
Figure 3: Control Panel of the 1-PCS.....	19
Figure 4: External Vacuum Adapter Set (1-PCS).....	22
Figure 5: Removing the Sealing Bar.....	26
Figure 6: Replacing the Sealing Wire.....	26
Figure 7: Replacing the Silicone Rubber of the Silicone Holders.....	27
Figure 8: Replacing the Lid Gasket.....	28
Figure 9: Overview of the Pump.....	29
Figure 10: Overview of the Pump.....	29
Figure 11: Overview of the Pump.....	30
Figure 12: Replacing the Oil Exhaust Filter.....	31
Figure 13: Replacing the Oil Exhaust Filter.....	32
Figure 14: Replacing the Oil Exhaust Filter.....	32
Figure 15: Overview of the Electrical Installation.....	40
Figure 16: Vapour Pressure Curve of Water.....	41

1 Preamble

This is the manual for your Henkelman vacuum packaging machine series: Jumbo.

This manual is intended for anyone who works with or services the machine.

This manual contains information and instructions for installation, operation and maintenance of the machine. We recommend that you carefully read this manual before use and follow the procedures and instructions strictly. This will ensure that you get the best out of the machine and prevents possible accidents and serious injury.

1.1 List of the Symbols Used in this Manual

For all operations in which the safety of the operator and/or technician is at stake and where caution should be exercised, the following symbols are used.



Indicates a hazardous situation that, if not avoided, could result in serious injury or death and/or material damage if one does not obey the safety instructions.



Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury and/or material damage if one does not follow the safety instructions.



Provides additional information that is helpful to do a task or to avoid problems.



This symbol warns for high voltage.

1.2 Qualified personnel

This document is intended for qualified personnel.



The term "qualified personnel" is defined here as individuals who thoroughly understand the equipment and its safe installation, operation or maintenance. Qualified personnel are physically capable of performing the required tasks, are familiar with all relevant and local safety rules and regulations and have been trained to safely install, operate or maintain the equipment. It is the responsibility of the company installing, operating or maintaining this equipment to ensure that its personnel meet these requirements.

1.3 Storing the manual

This manual is a part of your product. Store the manual in the immediate vicinity of the product. Always present a copy of the manual to operators and engineers working on the Vacuum Packaging Machine.

1.4 Regulatory information

The Henkelman Jumbo Vacuum Packaging Machine is designed to comply with the following directives:

- 2006/42/EC: Machinery Directive
- 2014/30/EG: EMC Directive
- 2014/35/EC: Low Voltage Directive



The CE Declaration is available upon request. Please contact the manufacturer.

1.5 Terms of Warranty

The warranty is subject to the following limitations. The warranty period for products supplied by Henkelman BV is 3 years from the date indicated on the purchase document. This warranty is limited to manufacturing and machining defects and therefore does not cover breakdowns involving any part of the product that is exposed to any form of wear and tear. Normal wear and tear that may be expected with the use of this product is therefore hereby excluded.

- The responsibility of Henkelman BV is limited to replacing defective parts; we shall not acknowledge claims for any other kind of damage or costs.
- The warranty automatically expires in case of overdue or poor maintenance.
- If there are doubts about the maintenance activities or if the machine fails to work correctly, always contact the supplier.
- The warranty does not apply if the defect is the result of incorrect or negligent use, or maintenance that was conducted contrary to the instructions given in this manual.
- The warranty is void in the event of repairs or modifications to the product by third parties.
- Defects due to damage or accidents caused by external factors are excluded from the warranty.
- If we replace parts in compliance with the obligations of this warranty, then the replaced parts become our property.

The provisions regarding the warranty and liability are part of the general terms and conditions of sale, which can be sent to you upon request.

1.6 Liability

- We exclude all liability insofar as far as it is not required by law.
- Our liability shall never exceed the total amount of the machine value in question.

- With the exception of the applicable legal regulations of public order and good faith, we are not liable to pay for any damage of any sort whatsoever to the counterparty or to third parties, directly or indirectly, including lost profits, damage to movable or immovable property or personal injury.
- We are in no way liable for damages arising from or resulting from the use of the product used, or the unsuitability thereof for the purpose for which the other party decided to purchase the product.

1.7 Terms and abbreviations

1-PCS	1-Programme Control System
Machine	Vacuum packaging machine
Pump	Vacuum pump

2 Safety

Your vacuum packaging machine has been carefully designed and expertly built to be operated safely. This is corroborated by the EC Declaration of Conformity. However, there are always dangers and safety risks that cannot be eliminated. These dangers and risks are the result of the use functions of the machine and operation of the machine by the user. This section discusses safety instructions and precautions, how they will be pointed out to you and the requirements the user must meet. It is essential that you are well aware of these safety instructions and requirements and observe them at all times!

2.1 Pictograms on the Machine

Pictograms and warnings have been fitted on the machine to warn users of the possible risks.




Warning sign "High Voltage"

- Is located on the back of the machine



Warning sign "Heat"

- Is located on the sealing bars and on the vacuum pump

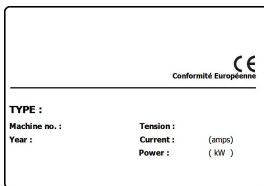

Machine plate

- Is located on the back of the machine



Regularly check whether the pictograms and markings are still clearly recognisable and legible. Replace them if this is not the case.

2.2 General Warnings



- All persons responsible for the operation of this machine must at least fully read and understand the chapters *Safety* on page 9 and *Operation* on page 19.
- Failure to follow or disregard of the safety instructions may result in serious injury.
- Never pack products that can be damaged by vacuum.
- Never vacuum live animals.
- Warranty and/or liability is void if any damage is caused by repairs and/or modifications that are not authorised by the supplier or any of its distributors.
- In case of malfunction, contact the supplier.
- High pressure cleaning is not allowed. This may cause damage to the electronics and other components.

- Prevent water from entering the ventilation inlet of the chamber or the exhaust of the pump. This causes irreversible damage to the pump.
- The work space around the machine must be safe. The owner of the machine must take the necessary precautions to operate the machine safely.
- It is forbidden to start the machine in an explosive environment.
- The machine has been designed in such a way that production is safe under normal ambient conditions.
- The owner of the machine must ensure that the instructions in this manual are actually complied with.
- The available safety devices may not be removed.
- The correct operation and safety of the system can only be guaranteed if the recommended maintenance is performed on time and properly.
- If work must be carried out on the machine, it must be disconnected and blocked from the power supply.



- Only a technical expert may perform work on the electrical installation.
- Internal procedures and monitoring must be in place to ensure that all relevant power supplies are disconnected.
- The machine may not be used during cleaning, inspection, repair or maintenance and must be disconnected from the power supply by disconnecting the plug.
- Never perform welding work on the machine without first disconnecting the cable connection to the electrical components.
- Never use the power supply of the control unit to connect other machines.
- All electrical connections must be connected to the terminal strips according to the wiring diagram.

2.3 Warnings During Use



- Before starting the machine, make sure no work is being performed on the installation and that the machine is ready for use.
- The machine may not be operated by unauthorised persons. This should be monitored by the machine operator(s).
- Immediately contact the service technician of your technical department or dealer if something does not seem right, such as unusual vibrations or unusual noise.
- Components of the sealing system can become very hot. Contact with these components may cause injuries.
- Improper use, such as switching off the machine while it is creating a vacuum, is strongly discouraged. Such actions may cause oil leaking back to the vacuum chamber.

2.4 Warnings for Operating Personnel



- Operating personnel must be 18 years or older.
- Only authorised persons are allowed to perform work on or with the machine.
- Personnel may only perform work for which it was trained. This applies to both maintenance and normal use.
- The machine may only be operated by trained personnel.
- Operating personnel must be familiar with all circumstances, so quick and effective action can be taken in case of an emergency.
- If an operator notices errors or risks or disagrees with safety measures, he or she should report this to the owner or manager.
- Safety shoes are mandatory.
- Appropriate work clothing is mandatory.
- All personnel must obey the safety regulations to avoid danger to themselves and others. Always strictly follow the work instructions.

3 Introduction

Henkelman BV is a supplier of ultra-modern vacuum packaging machines. Our machines are developed and manufactured to meet the highest standards. They combine a sleekly built and functional design with optimal ease of use and a long service life. After mounting the plug, it is just a matter of "plug & pack". The clever design ensures compliance with the hygiene standards at all times.

The Jumbo series are professional table top models, use-friendly and low-maintenance.

4 Description of the Machine

This section provides an short introduction to the machine and an overview of it's main components and functions. If detailed information is available in this manual, you will be referred to the specific sections.

4.1 Jumbo series

Basic vacuum packaging machines for basic packaging needs. The Jumbo series represent a range of compact table-top models.



All Jumbo models are equipped:

- Standard with 1 program memory
- Standard with double seal
- Free options: Cut-off and Wide seal

4.1.1 Overview of the Main Components

The figure below shows the main components of the Jumbo series. The model shown may differ from your machine.

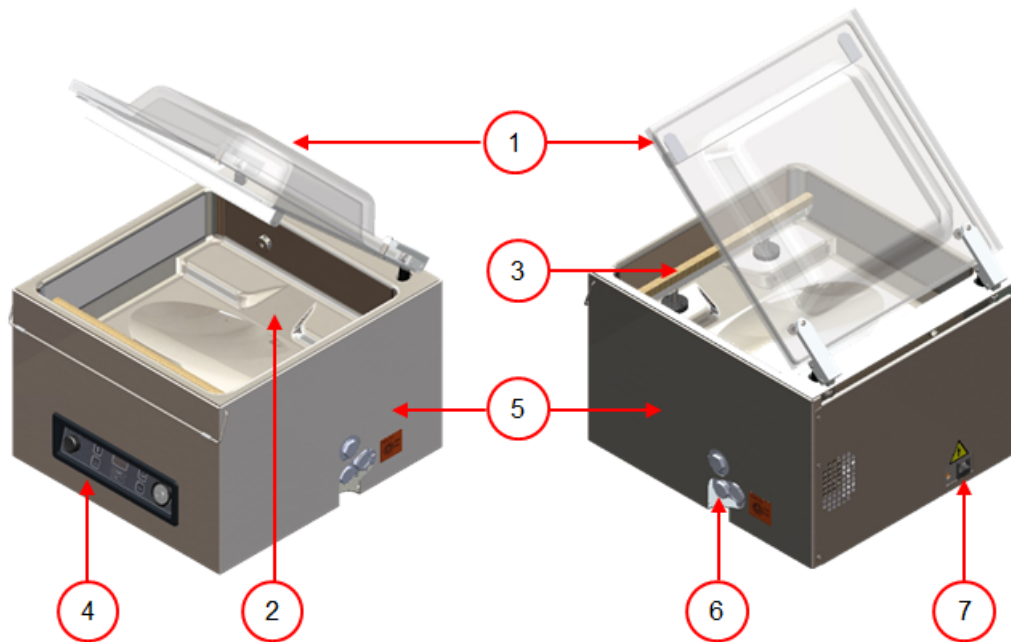


Figure 1: Overview of the Main Components

1. Lid

The lid closes the vacuum chamber during the application of the vacuum. A rubber is mounted in the lid to ensure proper closing. Silicone holders are mounted in the lid as counter beams of the sealing bar(s).

2. Vacuum chamber

The products to be packaged are placed on the work surface with the openings of the vacuum bags on the sealing position.

3. Seal system

Depending on the model, one or two sealing bars are mounted in the vacuum chamber. These close the vacuum bag.

4. Control panel

This serves to operate the available control functions.

5. Machine housing

The machine housing contains all the components necessary for the functioning of the machine.

6. Vacuum pump

The vacuum pump creates the vacuum.

7. Power connection

This serves to connect the machine to the power supply.

4.2 Description of the Packaging Process/Machine Functions

This section provides an overview of the packaging process and available machine functions.

4.2.1 Packaging Process/Machine Functions

This section describes the packaging process and the machine functions. See *Operation* on page 19 for the realization of the specific steps of the procedure.

Step	Process phase	Operation
1.	Preparation	The operator puts the product in a vacuum bag and places it on the work surface with the opening on the sealing position.
2.	Applying vacuum	The vacuum process is initiated by closing the lid. During the cycle, the air will be removed from the chamber until the set vacuum percentage or time has been reached.
3.	Sealing	The sealing bars are pressed against the vacuum bag and melt the bag closed. During the sealing process, the material of the vacuum bag is heated and pressed together to create a hermetic seal. The programming of this function takes place in seconds. Optionally, the second sealing wire can be replaced by a cut-off wire. The purpose of the cut-off wire is to remove the excess foil from the remaining flap.
4.	Decompressing	The vacuum is removed from the vacuum chamber by letting air into the chamber.
5.	Opening the vacuum chamber	The lid opens.
6.	Removing the product	The operator can remove the packaged product from the work surface.

4.2.2 General Functions

Function	Pictogram	Operation
Cleaning of the oil pump		The pump cleaning programme ensures that the pump is thoroughly rinsed. During the programme, the pump and oil reach the operating temperature, so the oil and moisture are separated and any contamination is filtered. The high temperature causes any moisture in the pump to evaporate, thus minimising the risk of corrosion.

Function	Pictogram	Operation
External Vacuum		This function allows special food containers to be vacuumed outside the machine. The options to set the vacuum value are the same as for standard vacuuming (see <i>External Vacuum (optional)</i> on page 22).

4.3 Sealing System

The sealing system closes the opening(s) of the bag to retain the vacuum and/or gas in the bag. The end of the bag can optionally be cut off by the sealing bar.

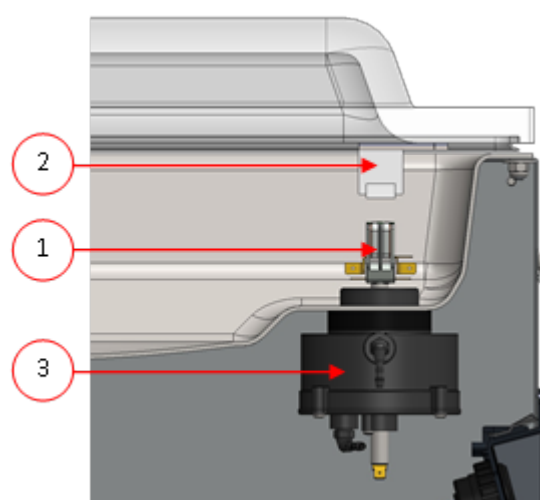


Figure 2: Overview of the Sealing System

1. Sealing bar

The sealing bar consists of the following components:

- Sealing wires: during the sealing process, the sealing wires are heated for a certain time causing the edges of the vacuum bag to melt together.
- Cut-off wires (optional): A cut-off wire is heated in such a way that the foil of the bag partially melts, allowing the excess foil of the vacuum bag to be removed easily.
- Teflon tape: sealing and cut-off wires are covered with Teflon tape to prevent the bag from sticking to the sealing bar.

Consult *Replacing the Sealing Wire* on page 25 for more detailed information about maintenance.

2. Silicone holder

Opposite the sealing bar is a silicone holder which provides counter pressure on the cylinders (*Replacing the Silicone Rubber of the Silicone Holders* on page 27).

3. Sealing mechanism

The sealing bars are pressed onto the vacuum bag by cylinders. By connecting the inlet of the cylinders with the atmospheric pressure outside, they press the sealing bar onto the bag.

5 Installation

Consult *Technical Data* on page 38 for the specifications of the machine.



Before installing the machine, carefully read the safety instructions in *Safety* on page 9. Failure to follow or disregard of the safety instructions may result in serious injury.

5.1 Transportation and Installation

The machine must be moved and transported in an upright position.

1. Place the machine on a flat, level surface. This is essential to ensure a trouble-free operation of the machine.



Do not position machines with plastic covers in the vicinity of a heat source.



Make sure there is sufficient space (at least 15 cm) around the machine to ensure a proper ventilation.

2. Verify that the machine housing is present and correctly fitted.

5.2 Connecting the Machine



Only a technical expert may perform work on the electrical installation.

Make sure the power supply for this machine matches to the voltage and amperage stated on the machine plate.

Specified amperage: 16 /fuse 20 C	Description
16	Nominal amperage
Fuse 20	Minimum fuse value with the recommended type of fuse
C	C characteristic

1. Fit the connecting cable to the machine. See *Technical Data* on page 38 for the correct electrical connection.
2. Connect the machine to a grounded wall outlet to avoid fire or electric shock.



- The power cable must be free at all times, and nothing may be placed on it.
- Immediately replace the power cable if damaged.

5.3 Prior to the First Use

See *Vacuum Pump maintenance* on page 28 for more information how to perform these steps.

Prior to the first use, the following steps must be performed:



Failure to do so may result in unrepairable damage to the machine.

1. Check the oil sight glass to see if the amount of oil in the pump is sufficient.
2. Optional: If the amount of oil in the pump is insufficient, refill it.
3. Start up the machine. See *Operation* on page 19 for more information.
4. Run the pump cleaning programme before using the machine for the first time.

6 Operation

Depending on the configuration of the vacuum packaging machine it is equipped with one of the following control systems:

- 1-Programme Control System (1-PCS)

Read the appropriate section how to operate the vacuum packaging machine.



- All persons responsible for the operation of this machine must at least fully read and understand the chapters *Safety* on page 9 and *Operation* on page 19.
- Failure to follow or disregard of the safety instructions may result in serious injury.

6.1 1-Programme Control System (1-PCS)

6.1.1 Operating Elements

The 1-PCS allows the machine to be operated and programmes to be changed.

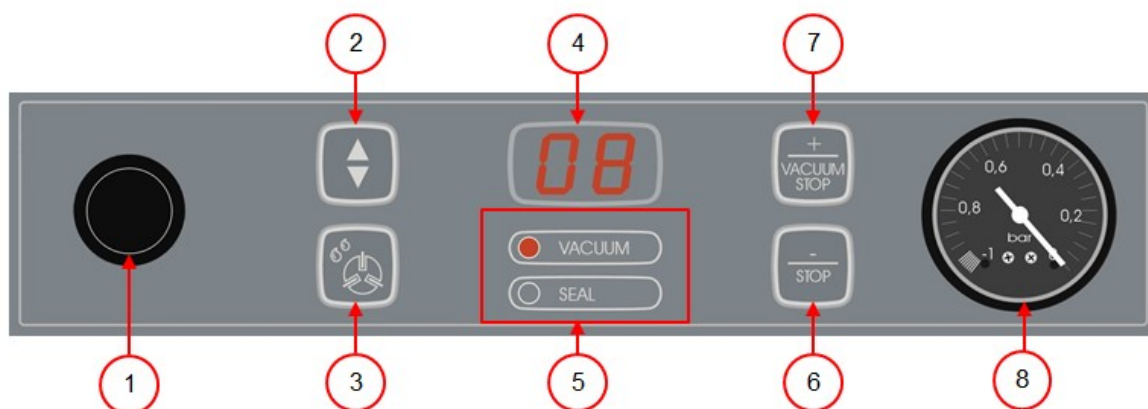


Figure 3: Control Panel of the 1-PCS

1. On/Off button

Serves to turn the control panel on or off.

Depending on the model, the on/off button is located on the left side of the control panel or on the rear of the machine near the power cord.

2. Cursor key

This key is used to operate the functions of the parameter display and function display.

3. Pump cleaning programme button

This is used to activate the pump cleaning programme. Moisture can condensate in the oil when the pump is running only short cycles or when you are packaging moisture-containing products. This programme removes moisture from the oil of the vacuum pump. See *Running the Pump Cleaning Programme* on page 24 for instructions.

4. Parameter display

This display shows the current value of the active function during the programme cycle or the set value of the selected function when the machine is inactive.

5. Function display

The LED light in front of the function lights up if the function is active during the programme cycle or if the function is selected in the programming mode.

6. – / STOP button

This is used to interrupt the entire cycle during a packaging cycle. All functions are skipped and the cycle is terminated. In the programming mode, the value of the selected parameter can be lowered using this button.

7. + / VACUUM STOP button

This stops the active function and proceeds to the next programme step. In the programming mode, the value of the selected parameter can be increased using this button.

8. Vacuum meter

Shows the pressure in the vacuum chamber. A value of -1 bar corresponds to 99% vacuum.

6.1.2 Starting the Machine

1. Plug in the machine.
2. Turn the main switch to the ON position (see *Electrical Installation* on page 40) to turn on the machine.
3. Press the on/off button on the control panel or on the rear of the machine to enable the operation.

Two dashes may be shown on the display during the first start-up or ventilation. This means that the machine needs to be decompressed. In this case, open the lid to decompress the machine.

6.1.3 Starting the Packaging Cycle

The machine must be started in accordance with *Starting the Machine* on page 20 before starting a packaging cycle.

1. Select the desired programme.
Press the ▲▼ button
2. Put the product/products in place.
 - a. Put the product/products in the vacuum bag.
 - b. Place the vacuum bag in/on the vacuum chamber. Make sure the opening(s) is/are correctly placed with regard to the seal position(s).
3. Close the lid.
The packaging cycle will start.

6.1.4 Proceeding to the Next Step in the Cycle

For some products, it may be necessary to proceed to the next step in the packaging cycle before the vacuum time or the vacuum level has been reached.

1. Proceed to the next step in the cycle.
Press the + / VACUUM STOP button.
The next step will be started.

6.1.5 Terminating a Programme

Programmes such as the packaging programme or the pump cleaning programme can be terminated at any time.

1. Terminate the programme.

Press the **STOP** button.

The programme will be terminated and the vacuum chamber is decompressed.

6.1.6 Changing the Programme Settings

This section describes the units and limits of the parameters and how parameters can be adjusted.

See *Operating Elements* on page 19 for an overview of the operating elements of the 1-PCS.

1. Use the **Cursor key** to scroll to the desired parameter.
The LED in front of the selected function will light up.
2. Press the **- / STOP** button and the **+ / VACUUM STOP** button to adjust the value.
The **- / STOP** button and the **+ / VACUUM STOP** button must be pressed and held for several seconds to adjust the value. This prevents the accidental changing of settings.
3. Press the **Cursor key** to activate the new parameter.

6.1.6.1 Vacuum

During the cycle, the air is removed from the chamber until the set time or percentage has been reached.

1. Use the **Cursor key** to scroll to the parameter Vacuum.
The LED in front of the selected function will light up.
2. Press the **+ / VACUUM STOP** button to adjust the value.
The **- / STOP** button and the **+ / VACUUM STOP** button must be pressed and held for several seconds to adjust the value. This prevents the accidental changing of settings.
3. Press the **Cursor key** to activate the new parameter.

6.1.6.2 Vacuum+ time (only for sensor control)

When air inclusions appear in the product, it may be desirable to prolong the vacuum time after reaching the maximum vacuum. This process is meant to let enclosed air escape from the product. The Vacuum+ time is set in seconds. If a Vacuum+ time is set, a dot will appear in the lower right corner of the parameter display.

1. Use the **Cursor key** to scroll to the parameter Vacuum.
The LED in front of the selected function will light up.
2. Press the **+ / VACUUM STOP** button to adjust the value to the maximum vacuum percentage of 99%.
The **+ / VACUUM STOP** button must be pressed and held for several seconds to adjust the value. This prevents the accidental changing of settings.
3. Press the **Cursor key** once to select the Vacuum+ time.
The display shows **O**.
The LED stays lit in front of **VACUUM**.
4. Press the buttons **- / STOP** and **+ / VACUUM STOP** to change the value in seconds.
A dot will appear in the lower right corner of the parameter display when the value is set.
5. Wait a few seconds or press the **Cursor key** to activate the new parameter.

6.1.6.3 Seal

This is the time that the sealing wire and/or the cut-off wire are heated. The longer the time, the more heat is transferred to the bag.

1. Use the **Cursor key** to scroll to the parameter Seal.
The LED in front of the selected function will light up.
2. Press the **- / STOP** button and the **+ / VACUUM STOP** button to adjust the value.
The **- / STOP** button and the **+ / VACUUM STOP** button must be pressed and held for several seconds to adjust the value. This prevents the accidental changing of settings.
3. Press the **Cursor key** to activate the new parameter.

6.1.6.4 External Vacuum (optional)

The External Vacuum function allows special food containers to be vacuum extracted outside of the machine.

Check in advance whether the relevant gastronorm container can withstand and hold a vacuum.

To select the External Vacuum option, follow the steps below.

1. Select the External Vacuum programme.
 - a. Press the **Pump Cleaning Program** button.
The display will show "C".
 - b. Press the **Cursor key**.
The display will show "E".
2. Connect the external vacuum hose to the machine by placing the adapter over the suction inlet (1) in the vacuum chamber.
3. Connect the external vacuum hose to the packaging.
 - a. Connect the adapter (3) of the external vacuum hose to the valve of the food container.
 - b. Slide the sliding valve (2) towards the hose (closed position).

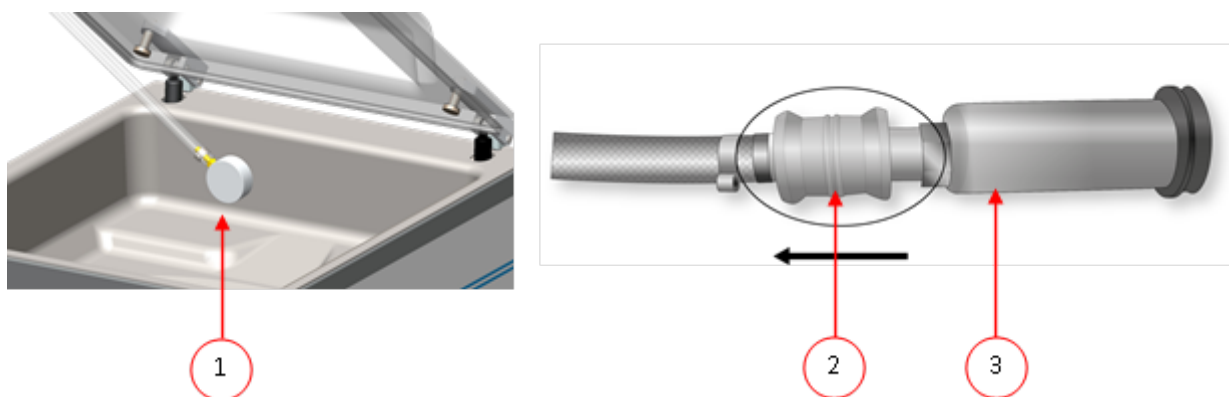


Figure 4: External Vacuum Adapter Set (1-PCS)

4. Press the **+ / VACUUM STOP** button to start the vacuum cycle.
The food container will be vacuum extracted.
5. Slide the sliding valve of the adapter towards the gastronorm container (open position) and remove the external vacuum hose from the food container.

6.1.7 Guideline for Function Values

Values can be set for each function. In order to understand the consequence of the set value, the table below explains the consequences of giving a low or high value for each function.

Function	Range	Conditions
Vacuum	30-99 % or 1-99 seconds	Rule of thumb: the higher the vacuum, the less oxygen remains in the package and the longer the shelf life of the product. There are exceptions to this rule.
Vacuum + (only for sensor control)	0-99 seconds	This is the time that is needed to let enclosed air escape after reaching the maximum vacuum.  Vacuum must be set to maximum.
Seal time	0.5 – 4.0 seconds	This is the time that the sealing wire and/or the cut-off wire are heated. The longer the time, the more heat is transferred to the bag. The average seal time is 1.8-2.5 seconds.
Cleaning of the pump	15 minutes	Fixed value.



The vacuum in the chamber must be at least 30% at the moment of sealing (-0.3 bar on the meter).

If the pressure is reduced, the boiling point of liquids will be decreased; see *Vapour Pressure Curve of Water* on page 41. As a result of this law of nature, a product may start boiling. In addition to contamination of the machine, this will reduce the weight and quality of the product to be packaged.

When packaging moisture-containing products, such as soups and sauces, it is important to closely monitor the vacuuming process. The moment bubbles are formed or the product starts to bubble, you should immediately proceed to the next step in the cycle. See *Proceeding to the Next Step in the Cycle* on page 20.

By letting products cool down sufficiently prior to starting the vacuuming process, a higher vacuum can be achieved.

When packaging moisture-containing products, it is important to run the pump cleaning programme at least once a week. When moisture-containing products are vacuumed on a daily basis, it is recommended to run the pump cleaning programme at the end of the day.

7 Maintenance

When carrying out maintenance work, always observe the following safety rules.

- Only trained technicians are authorised to perform the described maintenance activities.
- Always disconnect the power supply by disconnecting the plug.
- Test the machine after carrying out maintenance work or repairs to make sure the machine can be used safely.

7.1 Running the Pump Cleaning Programme

The pump cleaning programme runs the vacuum pump for 15 minutes. During the programme, the pump and the oil reach the operating temperature. Moisture in the pump is absorbed by the oil. The high temperature causes any moisture in the pump to evaporate, and minimises the risk of corrosion.

It is advisable to run the programme before using the machine for the first time, after the machine has been stationary for a lengthy period of time, and especially prior to changing oil.

Run the pump cleaning programme every week. If you package moisture-containing products, such as soups and sauces, the pump cleaning programme should be run every day.

1. Select the pump cleaning programme.

1-PCS

Press the **Pump Cleaning Programme** button.

2. Close the lid to start the pump cleaning programme.
The pump cleaning programme will run for 15 minutes.

7.2 Maintenance Schedule

The diagram below shows the maintenance activities that must be performed and the interval with which these activities must be performed.

For specific descriptions for performing maintenance activities, consult the appropriate section.

Activity *	1-D	1-W	6-M	1-Y	4-Y
Cleaning					
Cleaning the machine.	X				
Inspections					
Check the oil level.		X			
Run the pump cleaning programme.		X			
Inspect the sealing bars.		X			
Inspect the silicone rubber of the silicone holders.		X			
Inspect the lid gasket.		X			

Activity *	1-D	1-W	6-M	1-Y	4-Y
Check the plastic lid for cracks (if applicable).		X			
Inspect the lid springs. Pay additional attention to damage and the fastenings of the lid springs.		X			
Lubrication					
Replace the oil of the vacuum pump. See <i>Technical Data</i> on page 38 for the type of oil.			X		
Replacement					
Replace the sealing wires.			X		
Replace the silicone rubber of the silicone holders.			X		
Replace the lid gasket.			X		
Replace the oil exhaust filter.				X	
Contact your dealer for professional servicing.				X	
Replace the plastic lid (if applicable).					X

* 1-D = Daily, 1-W = Weekly, 6-M = Every 6 months, 1-Y = Annually, 4-Y = Every 4 years

7.3 Cleaning the Machine



Never clean the machine using a high pressure cleaner.

Do not use any aggressive or toxic cleaning agents.

Do not use any cleaning agents containing solvents.

1. Clean the surfaces with a soft, damp cloth. You can also apply a cleaning agent to the machine and wash it with clean water.

7.4 Replacing the Sealing Wire

Depending on the specifications of your machine, you can have one of the following (combinations of) sealing wires:

- Wide seal: one wide sealing wire
- Double seal: two sealing wires
- Trenn seal: one sealing wire and one cutting wire

The process of replacing the sealing wires is the same for all types.

Replace the sealing wires if the wire and/or the Teflon tape are damaged, or as specified in *Maintenance Schedule* on page 24.



Figure 5: Removing the Sealing Bar

1. Remove the sealing bar by lifting it from the cylinders. See *Figure 5: Removing the Sealing Bar* on page 26.

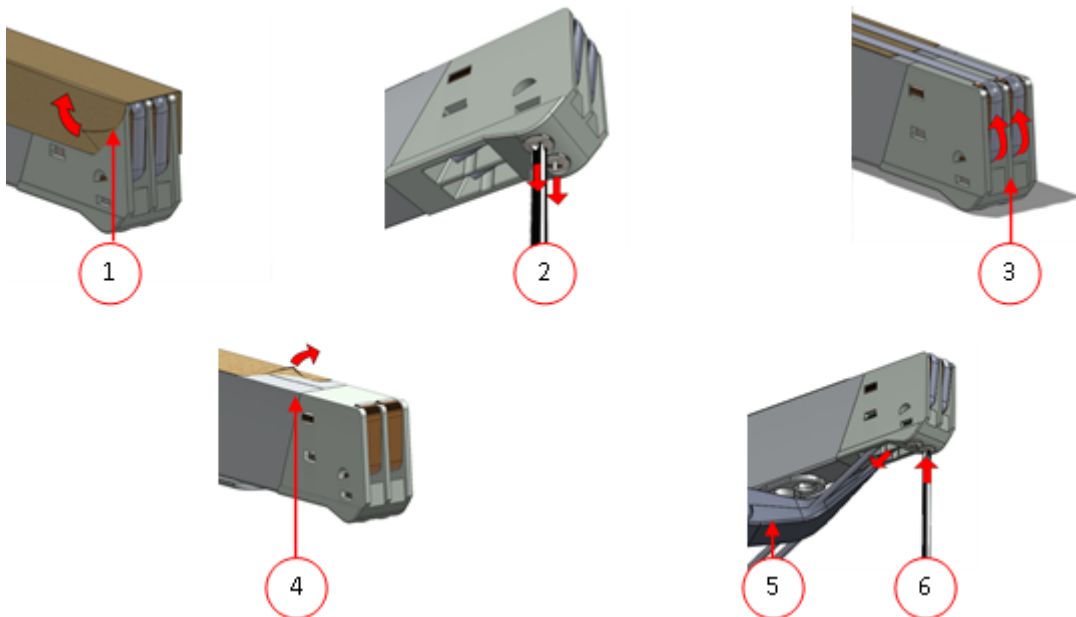


Figure 6: Replacing the Sealing Wire

2. Remove the Teflon tape (1) that protects the sealing wire.
3. Remove the screws (2) at the bottom of the sealing bar and remove the sealing wires (3).
4. Replace the Teflon tape on the sealing bar.
 - a. Pull the Teflon tape from the top of the sealing bar (4).
 - b. Clean the sealing bar with a dust-free cloth.
 - c. Apply a new piece of Teflon tape of the same length on the sealing bar.
5. Replace the sealing wires.
 - a. Cut a new piece of sealing wire or cutting wire at the length of the sealing bar plus approximately 15 cm.
 - b. First place the wire on one side of the sealing bar by tightening the screws (2).
 - c. Place the other end of the wire in its location and tension it with pliers. Now fasten it by tightening the screws.
 - d. Cut both ends of the wire.
6. Replace the Teflon tape on the sealing wire.

- a. Cut a piece of Teflon tape at the length of the sealing bar plus approximately 5 cm.
 - b. Attach the tape over the sealing wires on the sealing bar evenly and without folds.
 - c. Cut the tape.
7. Place the sealing bar back in its position.

7.5 Replacing the Silicone Rubber of the Silicone Holders

To ensure a seal of good quality, the silicone rubber may not be damaged and the surface must be smooth. Mechanical contact or burning by the sealing wire may damage the rubber.

Replace the silicone rubber if damaged or as specified in *Maintenance Schedule* on page 24.

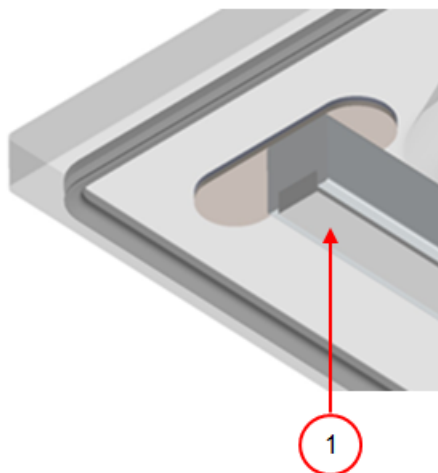


Figure 7: Replacing the Silicone Rubber of the Silicone Holders

1. Pull the old silicone rubber from the holder, see *Figure 7: Replacing the Silicone Rubber of the Silicone Holders* on page 27.
2. Cut a new piece of silicone rubber. Make sure it is the same length as the holder.



If the rubber is too short or too long, this may cause problems with the seal of the bag.

3. Install the new piece of silicone rubber by pressing it into the recess of the silicone holder. Ensure that the silicone rubber is fully and uniformly placed in the recess. It is also important that the surface of the silicone rubber is smooth after it is in place, and that it shows no signs of stress.

7.6 Replacing the Lid Gasket

The lid gasket ensures the vacuum chamber is fully closed during the machine cycle. This is essential to reach the maximum vacuum level. Due to extreme pressure differences, the gasket wears and should therefore be replaced regularly.

Replace the lid gasket if damaged or as specified in *Maintenance Schedule* on page 24.

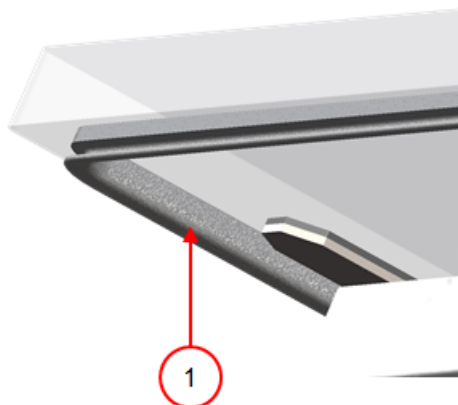


Figure 8: Replacing the Lid Gasket

1. Pull the old gasket loose to remove it.
2. Cut a new piece of rubber.



Preferably cut the new piece of rubber slightly longer than the old piece.
The edges must be cut straight.



If the lid gasket is too short or too long, this may cause problems when closing the lid or it may cause leakage.

3. Install the new gasket by pressing it into the gasket slot. The lip of the gasket must face downwards and outwards.

The gasket should be placed in the slot evenly and without any tension. The edges must be placed closely together to prevent leakage.

7.7 Inspecting the Lid Springs

1. Check the fastenings of the lid springs for wear, corrosion and damage.
2. Check the lid springs for wear and damage.



In the case of irregularities, please contact your service dealer.

7.8 Vacuum Pump maintenance

The vacuum pump creates the vacuum. Regular maintenance of the pump is very important.

7.8.1 Overview

Depending of the configuration the machine is equipped with one of the following pumps:

7.8.1.1 Pump 4 m³/h

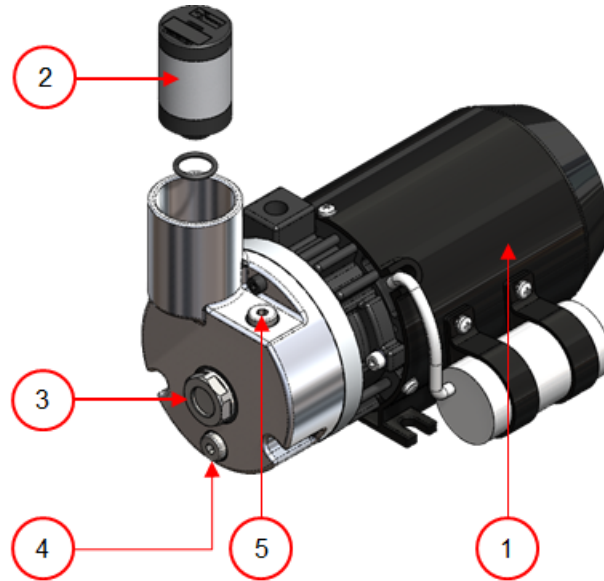


Figure 9: Overview of the Pump

1. **Vacuum pump** - Creates the vacuum for the process.
2. **Oil exhaust filter** - Filters the air by capturing oil vapours.
3. **Oil sight glass** - Indicates the maximum and minimum oil levels of the vacuum pump.
4. **Oil drain plug** - Removing the oil drain plug allows the oil to be drained.
5. **Oil filler plug** - Removing the oil filler plug allows the oil to be refilled.

7.8.1.2 Pump 8 m³/h

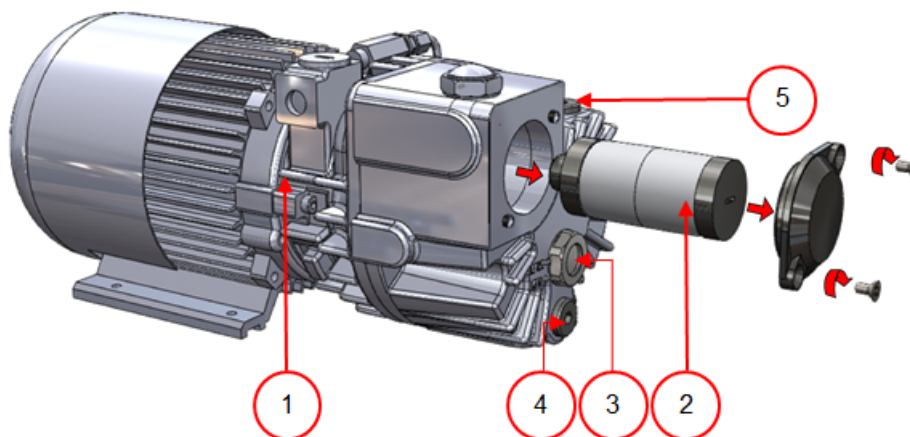


Figure 10: Overview of the Pump

1. **Vacuum pump** - Creates the vacuum for the process.
2. **Oil exhaust filter** - Filters the air by capturing oil vapours.
3. **Oil sight glass** - Indicates the maximum and minimum oil levels of the vacuum pump.
4. **Oil drain plug** - Removing the oil drain plug allows the oil to be drained.

5. **Oil filler plug** - Removing the oil filler plug allows the oil to be refilled.

7.8.1.3 Pump 16 - 21 m³/h

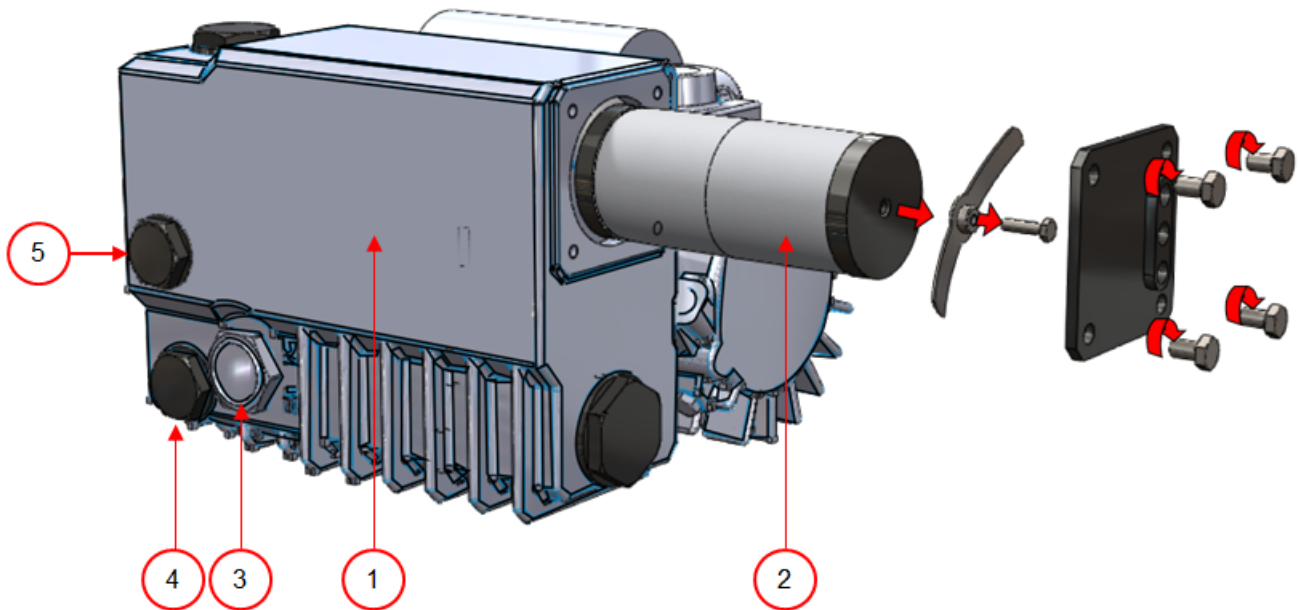


Figure 11: Overview of the Pump

1. **Vacuum pump** - Creates the vacuum for the process.
2. **Oil exhaust filter** - Filters the air by capturing oil vapours.
3. **Oil sight glass** - Indicates the maximum and minimum oil levels of the vacuum pump.
4. **Oil drain plug** - Removing the oil drain plug allows the oil to be drained.
5. **Oil filler plug** - Removing the oil filler plug allows the oil to be refilled.

7.8.2 Removing Oil, Refilling Oil

This section describes how to remove oil from the pump and how to refill the oil.

See *Overview* on page 28 for the pump fitted in the machine and an overview of the parts.

If the machine remains unused for a prolonged period of time, the oil must be removed from the pump. This is necessary because moisture and dirt in the oil may affect the pump, causing the pump to jam at the next use.



The oil in the vacuum pump may be hot. Avoid contact with hot oil when removing the oil.

Follow the steps below to remove the oil from the pump:

1. Place a drip pan under the oil drain plug.
2. Remove the oil drain plug.
The oil will drain from the pump.
3. Replace the oil drain plug.

Follow the steps below to add oil to the pump. You can follow these steps after all oil has been removed, but also to refill oil.

4. Remove the oil filler plug.
5. Add oil until the oil level is between the minimum and maximum levels of the oil sight glass.
6. Replace the oil filler plug.

7.8.3 Replacing the Oil Exhaust Filter

The oil exhaust filter prevents oil vapours from being emitted from the vacuum pump with the exhaust air. If the filter becomes saturated, the maximum vacuum level can no longer be reached. Replace the filter in case of vacuum problems or as specified in *Maintenance Schedule* on page 24.

7.8.3.1 Pump 4 m³/h

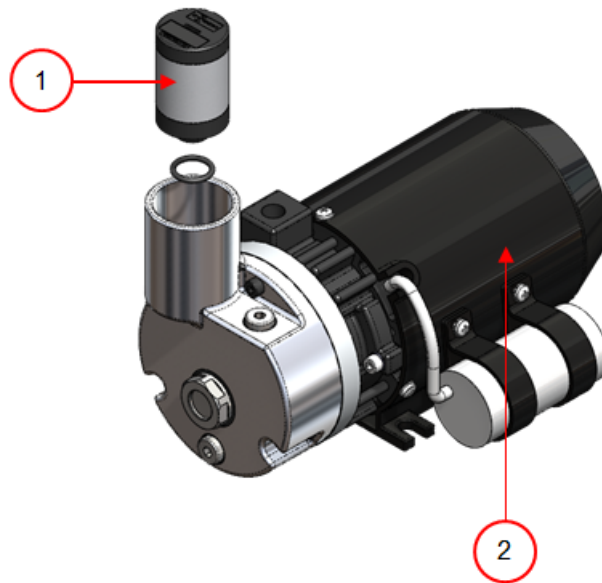


Figure 12: Replacing the Oil Exhaust Filter

Follow the step below to remove the old oil exhaust filter:

1. Remove the oil exhaust filter (1) from the vacuum pump (2).

Follow the step below to install a new oil exhaust filter:

2. Turn the new filter into the vacuum pump.
Make sure the O-ring is properly placed on the filter inlet.

7.8.3.2 Pump 8 m³/h

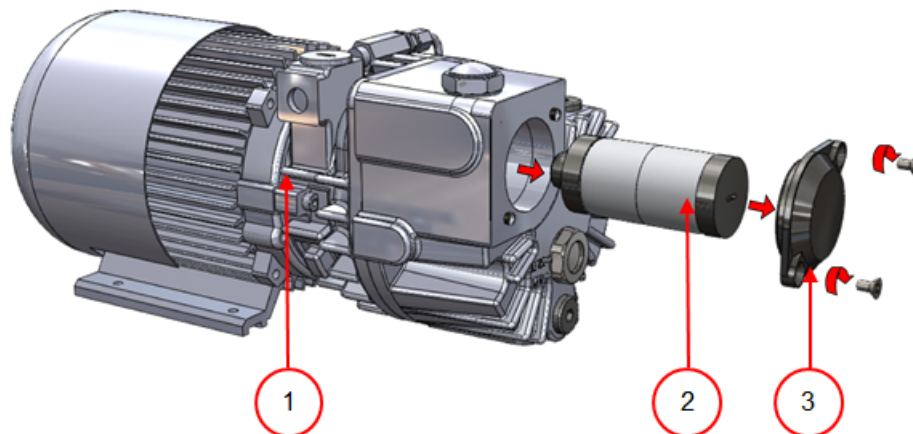


Figure 13: Replacing the Oil Exhaust Filter

Follow the steps below to remove the old oil exhaust filter:

1. Remove the filter cover (3) of the vacuum pump (1) and put it aside.
2. Remove the oil exhaust filter (2) from the vacuum pump.

Follow the steps below to install a new oil exhaust filter:

3. Turn the new filter into the vacuum pump.
Make sure the O-ring is properly placed on the filter inlet.
4. Mount the filter cover placed aside.

7.8.3.3 Pump 16 - 21 m³/h

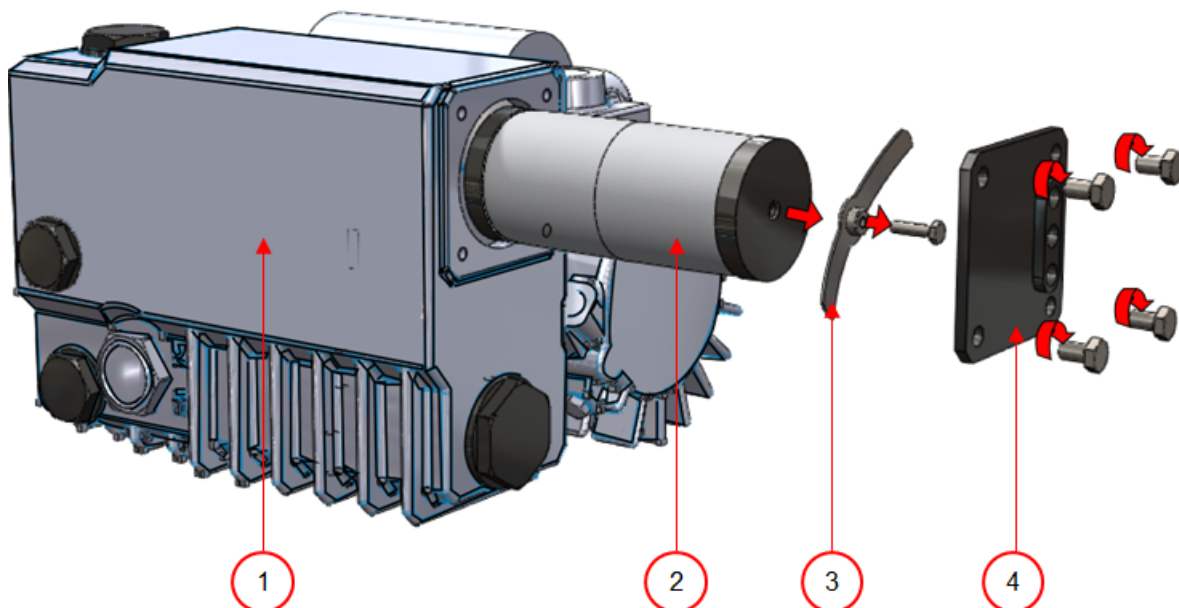


Figure 14: Replacing the Oil Exhaust Filter

Follow the steps below to remove the old oil exhaust filter:

1. Remove the filter cover (4) of the vacuum pump (1) and put it aside.
2. Remove the leaf spring (3) and put it aside.
3. Remove the old filter (2).

Follow the steps below to install a new oil exhaust filter:

4. Insert the new filter into the vacuum pump.
Make sure the O-ring is properly placed on the filter inlet.
5. Mount the leaf spring placed aside.
6. Mount the filter cover placed aside.

7.8.4 Running the Pump Cleaning Programme

The pump cleaning programme runs the vacuum pump for 15 minutes. During the programme, the pump and the oil reach the operating temperature. Moisture in the pump is absorbed by the oil. The high temperature causes any moisture in the pump to evaporate, and minimises the risk of corrosion.

It is advisable to run the programme before using the machine for the first time, after the machine has been stationary for a lengthy period of time, and especially prior to changing oil.

Run the pump cleaning programme every week. If you package moisture-containing products, such as soups and sauces, the pump cleaning programme should be run every day.

1. Select the pump cleaning programme.

1-PCS

Press the **Pump Cleaning Programme** button.

2. Close the lid to start the pump cleaning programme.
The pump cleaning programme will run for 15 minutes.

8 Troubleshooting and Error Codes

The tables below show the possible malfunctions and the corresponding causes as well as the steps to be taken.

Malfunction	Activity	More information
Control panel does not illuminate.	• Connect the machine to the power supply.	<i>Connecting the Machine</i> on page 17 <i>Electrical Installation</i> on page 40
The control panel is on, but there is no activity after closing the lid.	• Check or adjust the switch of the lid.	Contact your supplier.
Insufficient end vacuum.	• Check the vacuum settings of the programme and adjust them. • Make sure that the extraction opening is not covered. • Check the oil level in the pump. • Check/replace the oil exhaust filter. • Check/replace the lid gasket.	<i>Operation</i> on page 19. <i>Vacuum Pump maintenance</i> on page 28. <i>Replacing the Oil Exhaust Filter</i> on page 31. <i>Replacing the Lid Gasket</i> on page 27.
Vacuum process is slow.	• Make sure that the extraction opening is not covered. • Check the oil level in the pump. • Check/replace the oil exhaust filter.	<i>Vacuum Pump maintenance</i> on page 28. <i>Replacing the Oil Exhaust Filter</i> on page 31.

Malfunction	Activity	More information
Vacuum bag is not sealed correctly.	• Check the seal settings of the programme and adjust them. • Check/replace the Teflon tape and the sealing wires. • Check/replace the silicone rubber of the silicone holders. • Check the inside of the vacuum for contamination and clean it.	<i>Operation</i> on page 19. <i>Replacing the Sealing Wire</i> on page 25. <i>Replacing the Silicone Rubber of the Silicone Holders</i> on page 27.
The lid does not open automatically.	• Check the gas spring/springs of the lid.	Contact your supplier.

Error messages for the 1-PCS

Malfunction	Activity	More information
"F1" in display.	• Check or adjust the switch of the lid. • Verify that the vacuum pump is running.	Contact your supplier.
"F2" in display.	• Check whether the lid is open. • Restart the machine.	In case the malfunction reoccurs, contact your supplier.
--- in display.	• Check whether the lid is open.	
Flashing "C" in display.	• This is a reminder to run the pump cleaning programme.	• Run the pump cleaning programme.
Oil Notification (if activated).	A service check is needed.	Contact your supplier.

9 Terms of Warranty

- The responsibility of Henkelman BV is limited to replacing defective parts; we shall not acknowledge claims for any other kind of damage or costs.
- The warranty automatically expires in case of overdue or poor maintenance.
- If there are doubts about the maintenance activities or if the machine fails to work correctly, always contact the supplier.
- The warranty does not apply if the defect is the result of incorrect or negligent use, or maintenance that was conducted contrary to the instructions given in this manual.
- The warranty is void in the event of repairs or modifications to the product by third parties.
- Defects due to damage or accidents caused by external factors are excluded from the warranty.
- If we replace parts in compliance with the obligations of this warranty, then the replaced parts become our property.

The provisions regarding the warranty and liability are part of the general terms and conditions of sale, which can be sent to you upon request.

10 Disposal



Do not dispose of oil and components as household waste. When replacing oil or components at the end of the service life, ensure that all materials are collected and disposed or reused in a legal and environmentally sound manner.

11 Appendices

11.1 Technical Data

11.1.1 Jumbo series

Jumbo	Mini Jumbo	Jumbo Plus	30
General			
Ambient temperature during operation	5 to 30°C	5 to 30°C	5 to 30°C
Machine working conditions: relative humidity (non-condensing)	10-90%	10-90%	10-90%
Sound emission	< 70 dB(A)	< 70 dB(A)	< 70 dB(A)
Maximum daily production	5 hrs/day	5 hrs/day	5 hrs/day
Dimensions of the machine			
Width	335 mm	335 mm	450 mm
Length	450 mm	450 mm	554 mm
Height	305/340* mm	305/340* mm	365 mm
Weight	25 kg	30 kg	35 kg
Maximum product height	85/130* mm	85/130* mm	150 mm
Electrical connection			
Supply voltage	**	**	**
Connected load	**	**	**
Vacuum pump			
Capacity	4 m ³ /h	8 m ³ /h	8 m ³ /h
Oil	0.06 litre	0.25 litre	0.25 litre
Type of synthetic oil	Foodmax Air 32	Foodmax Air 32	Foodmax Air 32
Ambient temperature synthetic oil	-10 to 40°C***	-10 to 40°C***	-10 to 40°C***

*Depending on whether the machine has a high or a low lid.

**See machine plate.

***For different temperatures, please contact your dealer.

Jumbo	35	42	42XL	42XXL
General				
Ambient temperature during operation	5 to 30°C	5 to 30°C	5 to 30°C	5 to 30°C
Machine working conditions: relative humidity (non-condensing)	10-90%	10-90%	10-90%	10-90%
Sound emission	< 70 dB(A)	< 70 dB(A)	< 70 dB(A)	< 70 dB(A)
Maximum daily production	5 hrs/day	5 hrs/day	5 hrs/day	5 hrs/day
Dimensions of the machine				
Width	450 mm	493 mm	493 mm	493 mm
Length	554 mm	528 mm	616 mm	616 mm
Height	405 mm	440 mm	440 mm	468 mm
Weight	48 kg	56 kg	67 kg	70 kg
Maximum product height	150 mm	180 mm	180 mm	180 mm
Electrical connection				
Supply voltage	**	**	**	**
Connected load	**	**	**	**
Vacuum pump				
Capacity	16 m ³ /h	16 m ³ /h	16 m ³ /h	21 ³ /h
Oil	0.3 litre	0.3 litre	0.3 litre	0.5 litre
Type of synthetic oil	Foodmax Air 32	Foodmax Air 32	Foodmax Air 32	Foodmax Air 32
Ambient temperature synthetic oil	-10 to 40°C***	-10 to 40°C***	-10 to 40°C***	-10 to 40°C***

**See machine plate.

***For different temperatures, please contact your dealer.

11.2 Electrical Installation

The electrical installation provides power for the vacuum pump, the seal system and the operation of the machine.

See the electrical diagram for the further structure and operation of the electrical installation.
Please contact your supplier for the electrical diagram.



Only a technical expert may perform work on the electrical installation.

The machine consists of the following electrical components:

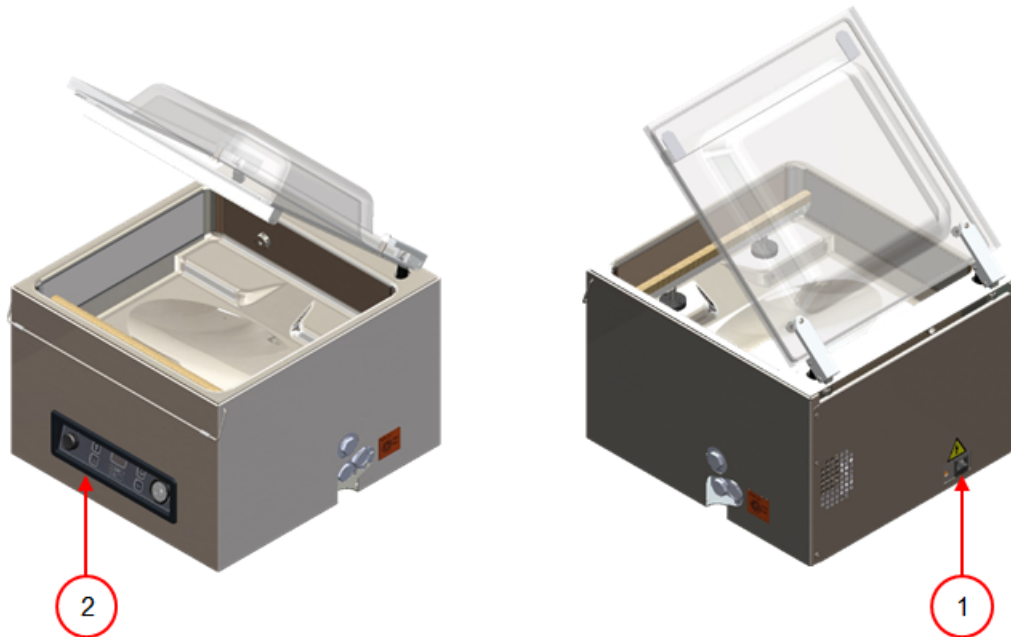


Figure 15: Overview of the Electrical Installation

1. Power connection

This serves to connect the machine to the power supply.

2. Control panel

This serves to operate the control functions. Your machine has the following control option:

- Chapter 1. 1-Programme Control System (1-PCS) on page 19

11.3 Vapour Pressure Curve of Water

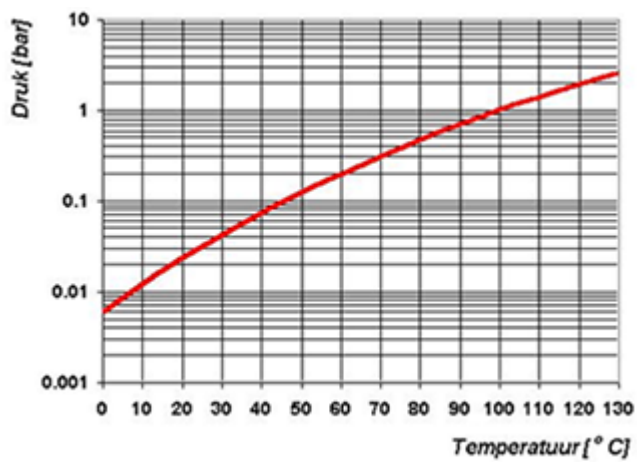


Figure 16: Vapour Pressure Curve of Water

11.4 Logbook

This logbook must include:

- Annual maintenance work
- Major replacements and emergencies
- Modifications
- Tests of the emergency stop buttons and safety devices

[illegible]



Henkelman BV
Titaniumlaan 10
5221 CK 's-Hertogenbosch
+31 (0)73 621 3671
+31 (0)73 622 1318
www.henkelman.com
info@henkelman.com